

UDC

10-bit Up/Down/Cross Mini-Converter



Published: 4/23/2012

Installation and Operation Guide

Because it matters.

AJA[®]
VIDEO SYSTEMS

Trademarks

AJA®, KONA®, Ki Pro®, and XENA® are registered trademarks of AJA Video, Inc. Because it Matters™, FiDO™, Io HD™ and Io™ are trademarks of AJA Video, Inc. HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC. DVI is a registered trademark of DDWG. All other trademarks are the property of their respective holders.

Notice

Copyright © 2012 AJA Video, Inc. All rights reserved. All information in this manual is subject to change without notice. No part of the document may be reproduced or transmitted in any form, or by any means, electronic or mechanical, including photocopying or recording, without the express written permission of AJA Inc.

Contacting Support

To contact AJA Video for sales or support, use any of the following methods:

180 Litton Drive, Grass Valley, CA. 95945 USA

Telephone: 800.251.4224 or 530.274.2048

Fax: 530.274.9442

Web: <http://www.aja.com>

Support Email: support@aja.com

Sales Email: sales@aja.com

When calling for support, have all information at hand prior to calling.

Limited Warranty

AJA Video warrants that this product will be free from defects in materials and workmanship for a period of five years from the date of purchase. If a product proves to be defective during this warranty period, AJA Video, at its option, will either repair the defective product without charge for parts and labor, or will provide a replacement in exchange for the defective product.

In order to obtain service under this warranty, you the Customer, must notify AJA Video of the defect before the expiration of the warranty period and make suitable arrangements for the performance of service. The Customer shall be responsible for packaging and shipping the defective product to a designated service center nominated by AJA Video, with shipping charges prepaid. AJA Video shall pay for the return of the product to the Customer if the shipment is to a location within the country in which the AJA Video service center is located. Customer shall be responsible for paying all shipping charges, insurance, duties, taxes, and any other charges for products returned to any other locations.

This warranty shall not apply to any defect, failure or damage caused by improper use or improper or inadequate maintenance and care. AJA Video shall not be obligated to furnish service under this warranty a) to repair damage resulting from attempts by personnel other than AJA Video representatives to install, repair or service the product, b) to repair damage resulting from improper use or connection to incompatible equipment, c) to repair any damage or malfunction caused by the use of non-AJA Video parts or supplies, or d) to service a product that has been modified or integrated with other products when the effect of such a modification or integration increases the time or difficulty of servicing the product.

THIS WARRANTY IS GIVEN BY AJA VIDEO IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED. AJA VIDEO AND ITS VENDORS DISCLAIM ANY IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. AJA VIDEO'S RESPONSIBILITY TO REPAIR OR REPLACE DEFECTIVE PRODUCTS IS THE WHOLE AND EXCLUSIVE REMEDY PROVIDED TO THE CUSTOMER FOR ANY INDIRECT, SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES IRRESPECTIVE OF WHETHER AJA VIDEO OR THE VENDOR HAS ADVANCE NOTICE OF THE POSSIBILITY OF SUCH DAMAGES.

Table of Contents

Trademarks.....	2
Notice.....	2
Contacting Support.....	2
Limited Warranty	2
Table of Contents.....	3
Introduction.....	5
Video Formats	5
Features.....	5
Block Diagram	5
I/O Connections	6
Installation	6
User Controls	6
Using Mini Config for Configuration and Viewing of Settings	7
Installing Mini Config on a Mac	7
Installing Mini Config on a PC.....	7
Running Mini Config	7
Operating Mini Config.....	8
Tabbed Screens	9
Video Tab Screen.....	10
HDMI Tab Screen.....	12
Audio Tab Screen	13
Update Tab Screen.....	14
Software Update Procedure	15
Info Tab Screen	16
Using DIP Switches to Control the UDC.....	17
Switch 1 (CONTROL)	17
Switch 2 (HD SD)	17
Switch 3 (1080 720).....	17
Switches 4 and 5 (FMT0 and FMT1).....	18
Switch 6 (3:2).....	18
Switch 7 (UP)	19
Switch 8 (DN).....	19
Conversion Mode Discussion and Examples	20
Upconvert Mode	20
Downconvert Mode	21
SD Aspect Ratio Convert.....	23
Specifications.....	24
Federal Communications Commission (FCC) Compliance Notices	25
Class A Interference Statement	25
FCC Caution	25
Canadian ICES Statement	25

European Union and European Free Trade Association (EFTA)	
Regulatory Compliance	25
Declaration of Conformity	26
Korea KCC Compliance Statement.....	27
Taiwan Compliance Statement	27
Japanese Compliance Statement	27
Translated caution statements, warning conventions and warning messages	27
Before operating your unit, please read the instructions in this document	28

Introduction

The UDC is a broadcast quality Up/Down/Cross Mini-Converter that can convert between SD, HD, and 3G video formats. Borrowing from AJA's industry leading conversion technology used in our model FS2, the UDC provides very high quality conversions at a low price. The UDC also supports 16-channel embedded SDI audio. I/Os include SD/HD/3G SDI Input and Output, HDMI output, and 2-channel RCA-style audio output. The UDC can be controlled by local DIP switches with additional control available via USB and AJA's Mini-Config application. A Reference Input allows the video output to be timed to a local reference.


Video Formats

The UDC does not convert frame rates—it works with the input frame rate. The only exception is a 3:2 function where 23.98 is converted to 59.94 (and 24 is converted to 60). If a reference is provided, it must be in the same frame rate hierarchy as the input video (e.g., 23.98/29.97/59.94, 25/50, or 24/30/60).

Features

- Converts between SD, HD, and 3G HD formats
- Supports 1080p50/60
- Very high quality conversions
- 16-channel embedded SDI audio input
- 16-channel embedded SDI audio output
- 8-channel HDMI output audio
- 2-channel RCA-style analog outputs at -10dBV (nominal)
- Reference Input
- Configurable via DIP switch or USB port and supplied Mini-Config software
- Uses +5 to +20V power (supply sold separately)
- 5-year warranty

Block Diagram

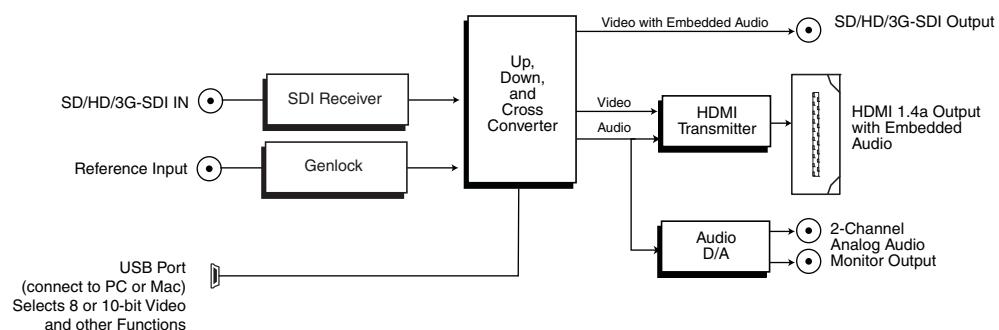

UDC Converter, Simplified Block Diagram

I/O Connections



Installation

Typically, UDC installation consists of the following steps:

1. Ensure the UDC is disconnected from power.
2. Connect video equipment to the converter BNCs and HDMI connector.
3. Connect audio equipment to RCA connectors (optional)
4. Apply +5 to +20 VDC power to the converter (AJA power supply model DWP or DWP-U).
5. The UDC will now run using the default factory settings. If you wish to alter the factory settings, see the following User Controls section.

User Controls

The UDC can be used right out of the box for many applications, since it is designed to recognize inputs and perform standard actions automatically. However, you can also manually configure the UDC using either of two methods:

- “Mini Config” software application supplied for PCs and Macs
- DIP switches accessible via a cutout on the back of the UDC case

One of the DIP switches is a “Local/Remote” switch. When in the “Local” mode, the remaining DIP switches support a subset of the user controls. When in the “Remote” mode, the normal Mini-Converter non-volatile registers control the unit (as last set).

Using Mini Config for Configuration and Viewing of Settings

The AJA Mini Config application, which displays a graphical view of the module's input/output status, offers more complete control of the UDC than is possible using the DIP switches. Versions of the Mini Config application are available to run on both Windows and Macintosh host platforms. Mini Config automatically scans the USB bus for connections to AJA modules and configures itself for the type of product discovered. The following describes Mini Config operation when connected to a UDC module.

Installing Mini Config on a Mac

To install the application on a Mac, simply insert the CD supplied with the Mini-Converter into the computer, and drag the "AJA Mini Config" application for your platform (Mac or PC) to your desktop or an applications folder.



Note: Macintosh computers must be Intel-based (G5, G4 and earlier models will not work with Mini Config.

Installing Mini Config on a PC



To install the application on a Windows PC, insert the CD supplied with the Mini-Converter into the computer, locate the "MinInstaller" application, and then double-click it.

A Setup Wizard will guide you through the installation. Just click Next to begin.

Answer all questions in the subsequent dialogs; when

you're done, you will be able to locate the Mini Config application in the AJA folder in the Programs listing.


Running Mini Config

Connect a UDC Mini-Converter to the PC or Mac via the supplied USB cable. Connect power to the Mini-Converter (DWP or DWP-U recommended).



Note: On a Mac, when the Mini-Converter is connected to the USB port, you may see an alert like the one shown here. If you do, press Cancel—this alert can be ignored.

To run Mini Config on a PC, find the AJA Mini Config in the program list and locate the AJA Mini Config application.

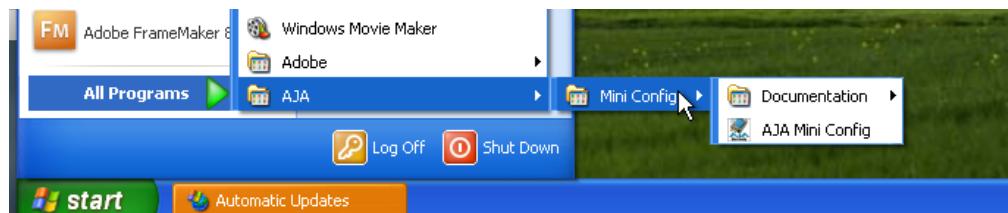


To run Mini Config on a Mac, double-click the Applications folder and locate the AJA Mini Config application. Double-click the AJA Mini Config application to launch it.

Once AJA Mini Config is running (PC or Mac), it looks pretty much the same, regardless of the platform.

A File menu at the top of the Mini Config application menu bar allows you to Save the current state of the Mini-Converter—with all the settings you've made—to a file for later recall. This allows you to set up the converter for different applications, storing each (with Save) to a unique name for easy recall later—using the Open menu item. A Revert to Factory Settings menu item similarly allows you to change the settings back to AJA's factory defaults. An Edit menu allows you to cut and paste values to/from fields, just as in other applications.

Operating Mini Config

When the application is running, you'll see a simple graphical interface for viewing settings and updating software. This user interface consists of an information area at the top that shows the available Mini-Converters attached to the computer via USB (in this case your UDC), with a graphical rendering of the selected Mini-Converter showing all the BNCs and connectors and their current states.

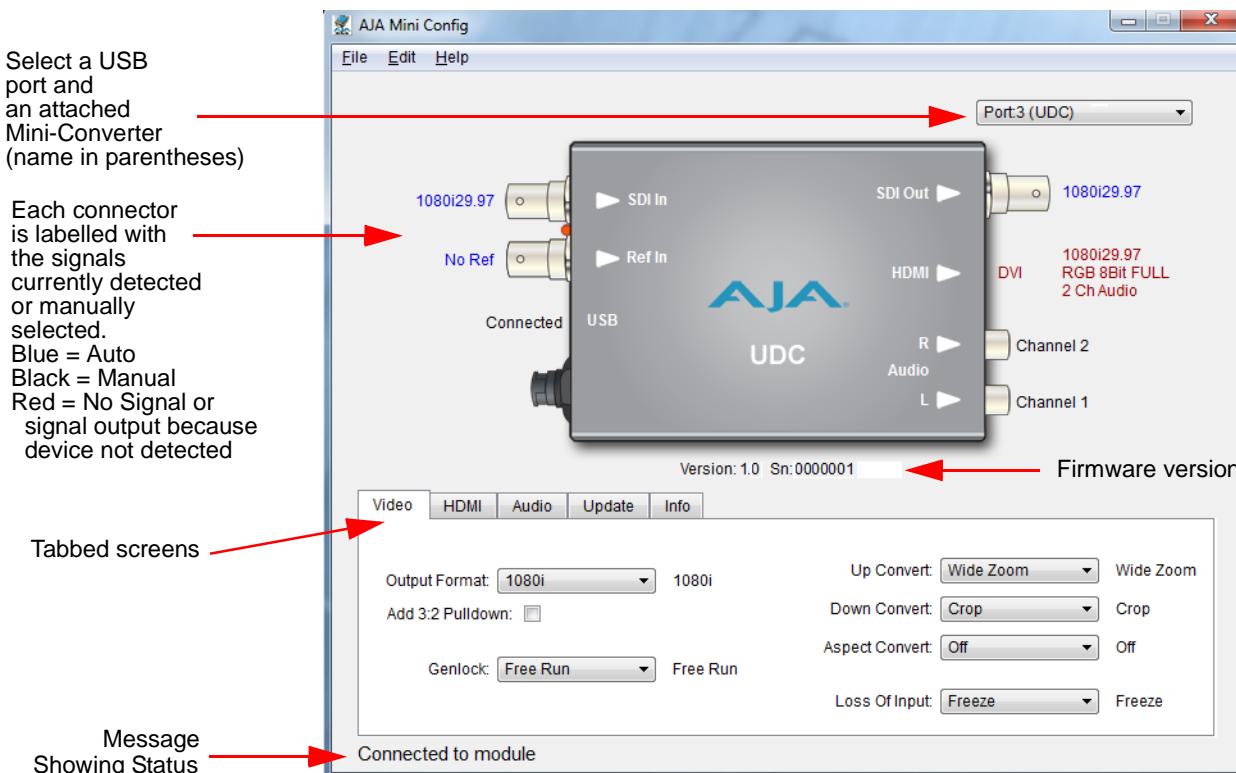

Mini Config, Video Screen

Colored text beside the connectors indicates signal type and what the UDC is doing. Text in blue shows the values automatically selected, while text in black shows values that have been manually selected. Text in red shows that the UDC is not detecting a signal or cannot negotiate with the attached device (even if can't detect an output device, it still shows the signal it is outputting).

Note: Configuration settings in red will change based on the attached output device as well as input signals. For improved accuracy and reliability, you should configure the Mini-Converter only when the target output device is attached and input signals are supplied at the inputs.

Screens are virtually the same on both PC and Mac, with subtle differences that reflect the general look of the platform environment.

Mini Config can manage multiple AJA Mini-Converters connected via USB—even when they are of differing types. However it only connects to one at a time. You can choose which Mini-Converter you wish to control using the pull-down menu in the upper right hand corner.

If you want to configure and update multiple Mini-Converters in parallel, you can do it by running multiple instances of the Mini Config application and have each control a different Mini-Converter.

The name of each Mini-Converter found can be seen in the menu pull-down showing the port number and converter name at the top right hand side of the screen. This allows you to select a desired Mini-Converter when there are more than one. Selecting a Mini-Converter with this pull-down menu causes this application to connect to the selected converter. The type of Mini-Converter and serial number will be shown in the graphic and text below it.

A status field at the bottom of the screen shows whether you are connected and communicating with the Mini-Converter shown using Mini-Config.

When configuring the UDC Mini-Converter, select it from the top pull-down, view the current settings and change any values. Making a change communicates that new value to the Mini-Converter's non-volatile memory.

Tabbed Screens

The Tabs delineate groups of controls for each type of task to be performed.




Mini Config, Tabbed Screens

Click on any of the tabbed buttons (Video/Audio/Update/Info) and the screen below will change to match. Each of these screens are described on the following pages.

Video Tab Screen

The Video Screen is where you can configure UDC video inputs and outputs. Pull-down menu settings are described following the screen graphic.

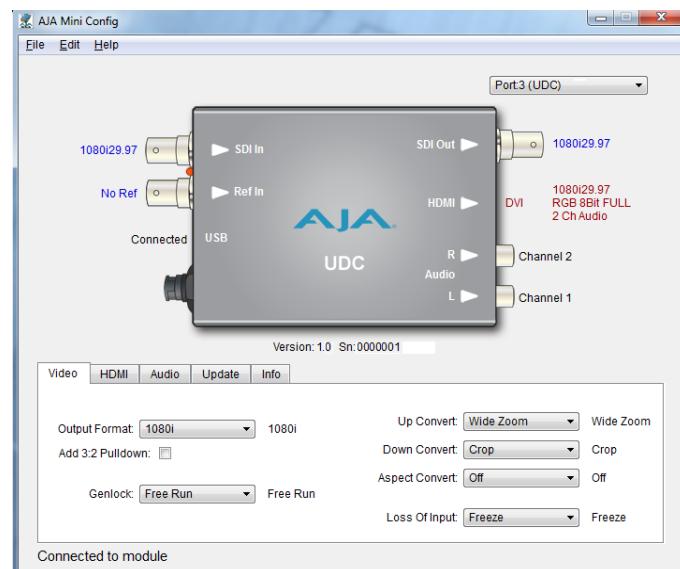

Mini Config, Video Screen

Output: Determines the UDC output video format. (This selection is used only when the UDC module is in Remote mode as set by DIP switch #1. In Local mode, the video output format is determined by DIP switches 2-5). These are the format choices:

SD: The output video format will be 525i59.94 (for 23.98, 29.97, or 59.94 fps video inputs) or 625i50 (for 25 or 50 fps video inputs).

720p: The output video format will be 720p59.94 (for 23.98, 29.97, or 59.94 fps video inputs), 720p60 (for 24, 30, or 60 fps video inputs), or 720p50 (for 25 or 50 fps video inputs).

1080i: The output video format will be 1080i59.94 (for 23.98, 29.97, or 59.94 fps video inputs), 1080i60 (for 24, 30, or 60 fps video inputs), or 1080i50 (for 25 or 50 fps video inputs).

1080psf: The output video format will be 1080psf23.98 (for 23.98 fps video inputs), 1080psf24 (for 24 fps video inputs), 1080psf25 (for 25 or 50 fps video inputs), 1080psf29.97 (for 29.97 or 59.94 video inputs), or 1080psf30 (for 30 or 60 fps video inputs).

1080p (low): The output video format will be 1080p23.98 (for 23.98 fps video inputs), 1080p24 (for 24 fps video inputs), 1080p25 (for 25 or 50 fps video inputs), 1080p29.97 (for 29.97 or 59.94 video inputs), or 1080p30 (for 30 or 60 fps video inputs).

1080p (high): The output video format will be 1080p50 (for 25 or 50 fps video inputs), 1080p59.94 (for 23.98, 29.97 or 59.94 video inputs), or 1080p60 (for 24, 30 or 60 fps video inputs).

Add 3:2 Pulldown: When the Add 3:2 Pull down box is checked, 23.98 fps and 24 fps video inputs are converted to 29.97 fps and 30 fps, respectively, by adding 3:2 pull down before conversion. Note that this selection is only used when the UDC module is in Remote mode (DIP switch #1). In Local mode, 3:2 pull down addition is determined by DIP switch #6.

Genlock: Determines the timing reference for the UDC video output. The selected reference is displayed to the right of the Genlock pull-down. These are the choices:

Auto (default): Auto uses the reference input if present, or locks to the SDI input if no reference is present or if the reference is present but is not compatible.

Lock to Input: Always locks to the SDI input.

Lock to Reference: Always locks to the Reference input – if the supplied reference is not compatible, reverts to Free Run.

Free Run: Always operates in Free Run mode.

Up Convert: Determines the mode when converting from SD input video to an HD output video format. This selection is only used when the UDC module is in Remote mode (DIP switch #1). In Local mode, the up convert mode is determined by DIP switch #7. These are the choices:

4x3 Pillar: Produces 4x3 image at center screen with black sidebars.

14x9 Pillar (default): Produces 14x9 image, zoomed slightly to fill a 14x9 image with black sidebars.

Full Screen: Produces anamorphic full screen display.

LB to Full Image: Produces image zoomed to fit the full screen (letterbox).

Wide Zoom: Produces an image sized to fit a 16x9 screen using a combination of zoom and stretch. (This can introduce a small aspect ratio change.)

Down Convert: Determines the mode when converting from HD input video to an SD output video format. Note that this selection is only used when the UDC module is in Remote mode (DIP switch #1). In Local mode, the upconvert mode is determined by DIP switch #8. These are the choices:

Crop (default): Image is cropped to fit new screen size.

Anamorphic: HD image is converted to full-screen SD with a 16x9 aspect ratio (anamorphic).

14x9: Image is reduced slightly with aspect ratio preserved. Black is added top and bottom, and the left and right sides are cropped.

Auto AFD: Automatically selects the best Downconvert mode based on the input video's Active Format Description (AFD) code. If the input video is not carrying an AFD VANC code, the Downconverter defaults to crop.

Letterbox: Image is reduced with black top and bottom added to image area, with the aspect ratio preserved.

Aspect Convert: Determines the mode when converting from SD input video to an SD output video format. There is no DIP switch equivalent for this control. The setting is saved in nonvolatile memory in the module and used for all subsequent operation. These are the choices:

Off (default): The input image is copied to the output with no scaling.

Letterbox: The input frame is scaled vertically to a 16x9 "letterboxed" size (anamorphic to letterbox conversion).

H Crop: The input frame is scaled horizontally to 16x9, then center-cropped (anamorphic to center crop conversion).

Pillarbox: The input frame is scaled horizontally to make a pillarbox output (4x3 to anamorphic conversion).

V Crop: The input frame is scaled vertically to make a vertically cropped output (letterbox to anamorphic conversion).

14x9: The input frame is scaled horizontally and vertically as a compromise between H Crop and Letterbox (anamorphic to 14x9 conversion).


Loss of Input: Determines what action is taken when input video is lost. These are the choices:

Black (default): The output goes to black.

Freeze: The output freezes on the last good frame.

HDMI Tab Screen

Provides user selection of the HDMI output modes. There is no DIP switch equivalent for these controls. The setting is saved in nonvolatile memory in the module and used for all subsequent operation.

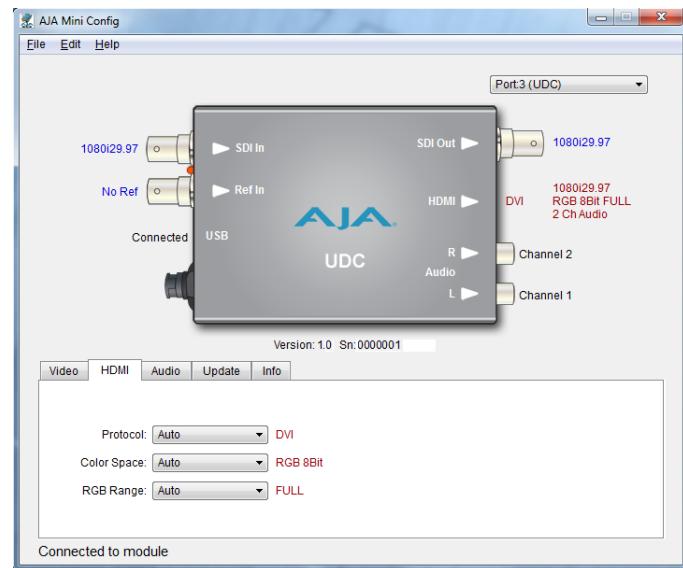

Mini Config, HDMI Screen

HDMI Video Output: The HDMI video output always mirrors the SDI video output, both in content and output format selection. Because there are no corresponding HDMI formats, the HDMI output is disabled when the output format is 1080psf23.98 or 1080psf24.

Protocol: Selects whether the HDMI output uses DVI or HDMI protocols for sending video to the destination device. These are the choices:

Auto: UDC automatically selects the output protocol based on getting the attached HDMI device's EDID information. This is the recommended setting. The selected protocol is shown to the right of the popup control.

HDMI: UDC uses HDMI protocols regardless of the attached device's EDID.

DVI: UDC uses DVI protocols regardless of the attached device's EDID. Because DVI protocols do not support audio or HDMI InfoFrame ancillary data, select this mode only if you know that the attached device requires it.

Color Space: Selects the HDMI output color space and depth. These are the choices:

Auto: UDC automatically selects the mode based on getting the attached HDMI device's EDID information. This is the recommended setting. The selected mode is shown to the right of the pull-down control.

RGB 8Bit: UDC uses 8-bit RGB mode regardless of the attached device's EDID.

RGB 10Bit: UDC uses 10-bit RGB mode regardless of the attached device's EDID.

YCbCr 10Bit: UDC uses 10-bit YCbCr mode regardless of the attached device's EDID.

RGB Range: Selects the HDMI video levels when the Color Space is RGB 8Bit or RGB 10Bit.


Auto: The UDC automatically selects the mode based on getting the attached HDMI device's EDID information. This is the recommended setting. The selected mode is shown to the right of the popup control.

SMPTE: The UDC scales the output video level to 8-bit range 16 - 235 (10-bit 64 - 940) regardless of the attached device's EDID.

Full Range: The UDC scales the output video level to 8-bit range 0 - 255 (10-bit 0 - 1023) regardless of the attached device's EDID.

Audio Tab Screen

The Audio Screen is where you can configure UDC HDMI and analog (RCA-style) audio output channels. Pull down menu settings are described following the screen graphic. There is no DIP switch equivalent for these controls. The setting is saved in nonvolatile memory in the module and used for all subsequent operation.

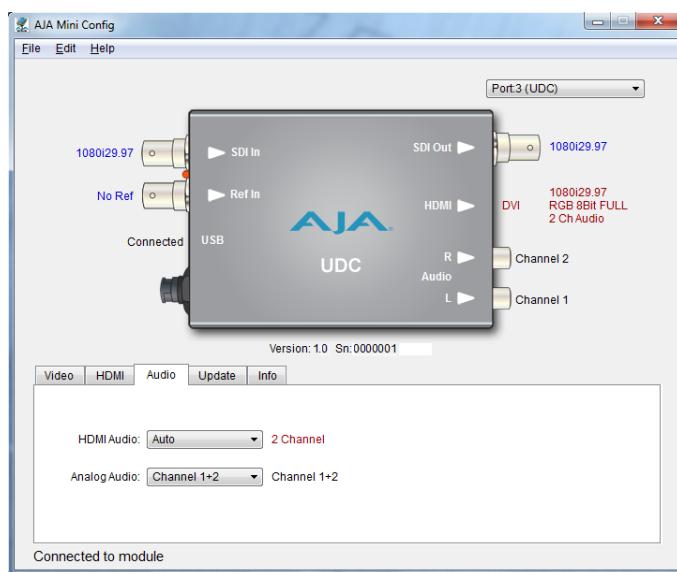

Mini Config, Audio Screen

SDI Output (Embedded) Audio: The output audio is a channel-for-channel copy of the input SDI embedded audio. There are no user controls.

HDMI Audio: Selects how many SDI channels are passed to the HDMI connector and which channel pairs are selected. These are the choices:

Auto: The UDC automatically selects the audio output configuration based on communicating with the attached HDMI device. The resulting mode is displayed to the right of the popup control.

2 Channel: Outputs a pair of channels from the SDI stream to two channels on the HDMI output connector. The selected audio pair is determined by the Analog Audio setting (below).


8 Channel: Outputs SDI channels 1 through 8 to the HDMI output connector.

Analog Audio: Selects the channel pair that will be output to the Analog RCA connectors (L/R) and the HDMI audio output (when HDMI Audio is in 2-channel mode). These are the choices:

Channel 1+2, Channel 3+4, Channel 5+6, Channel 7+8, Channel 9+10, Channel 11+12, Channel 13+14, Channel 15+16

Update Tab Screen

Use this Update screen to view the software version currently installed on the UDC or to install new software.

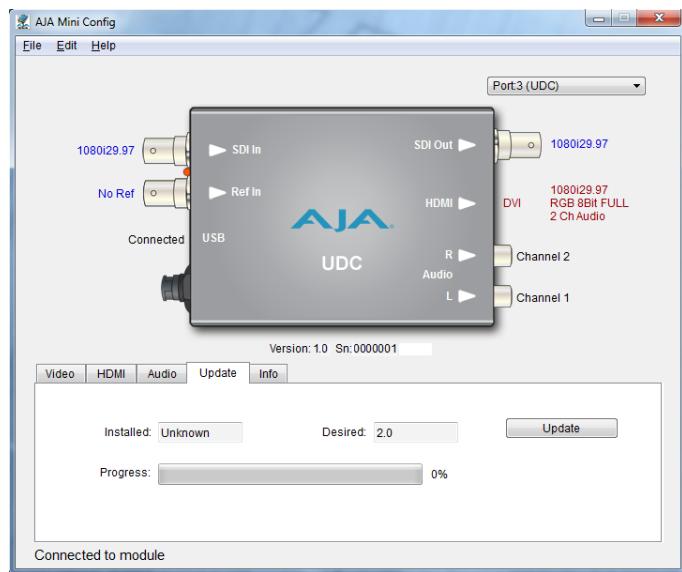

Mini Config, Update Screen

Note: When discussing Mini-Converters, “Firmware” is software that will be stored in the Mini-Converter’s non-volatile memory and used when it is powered up. This is different from the Mini Config application software. The version numbers shown in the Update screen refer only to the firmware.

The following fields and controls are present in this screen:

Installed: This field shows the version of the UDC firmware currently installed.

Desired: This field shows the version of firmware embedded in the Mini-Config application, which you can install into the Mini-Converter by clicking the Update button.


Update: This button initiates a software update operation, loading the “Desired” version of firmware into the Mini-Converter’s non-volatile memory.

Progress: This indicator bar shows the progress of software being installed.

Software Update Procedure


Use the Update screen to update the UDC software as follows:

1. Check the AJA website for new Mini-Config software for your Mini-Converter. If you find new software, download it and uncompress the (zip) file archive. Use this URL to check for new software:
<http://www.aja.com/support/converters/converters-mini-rackmount.php>
2. Connect the Mini-Converter to a Mac or PC via a USB port on the computer, and run the new Mini-Config software you just downloaded.
3. Click on the Update tab screen.
4. Check the Installed version level against the Desired version level. If the Desired is newer, click the Update button to download the new firmware to the Mini-Converter; progress will be shown via the “Progress” thermometer bar. When you click Update, Mini Config will provide a dialog asking you to confirm that you really want to update the firmware (see below).

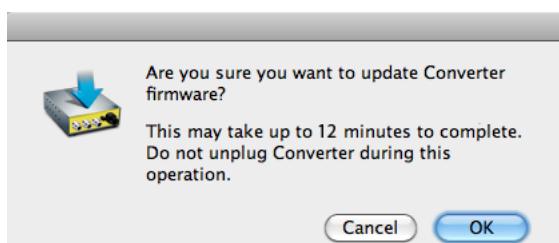

Info Tab Screen

This screen provides basic information about the Mini-Converter. This information, which consists of unit identifying information, is mostly useful when calling AJA Support for service or technical support.

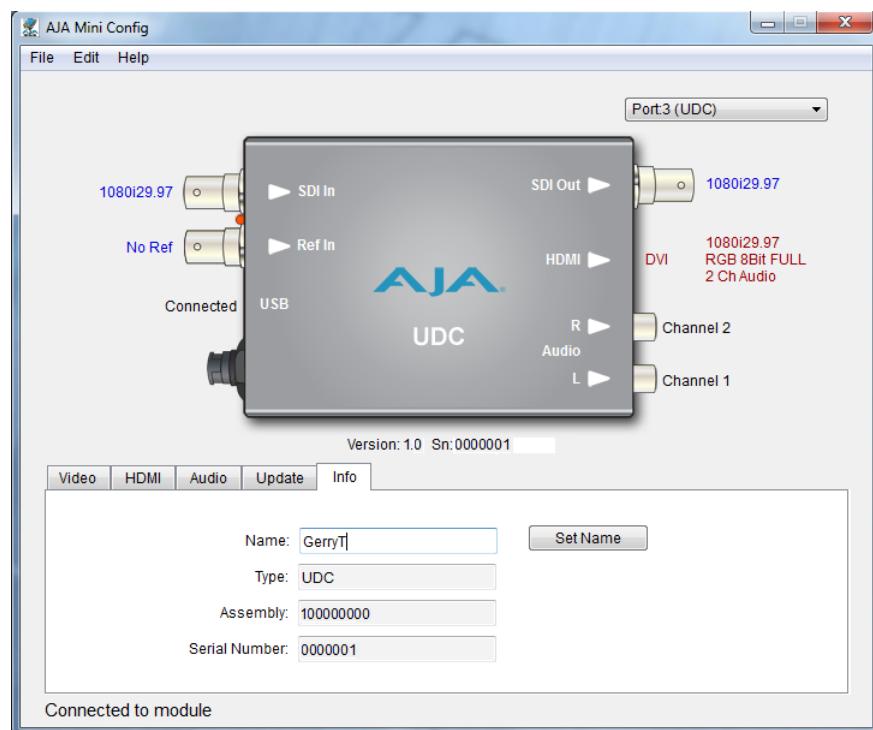

Mini Config, Info Screen

Name: This field allows you to give your Mini-Converter a name. This may be useful if you have several Mini-Converters attached to a single Mac/PC via USB so you can distinguish one of them easily (especially if they're the same model). In the example shown previously, the UDC has been named "pilot." To change the value, type in a new name and click the "Set Name" button.

Type: This is the factory set model name of the Mini-Converter (UDC).

Assembly: This is the factory assembly number.

Serial Number: This is the factory set unique serial number of your UDC. If you ever call AJA Support for service, you may be asked for this number.

Using DIP Switches to Control the UDC



In addition to the Mini-Config application discussed earlier, you can also control the unit via an 8-switch DIP, accessible through a cut-out in the bottom of the unit.

The default positions are shown in the figure on the left. The default settings result in an output of 1080i59.94 with NTSC related inputs and 1080i50 with PAL related inputs.

For 1080p23.98/1080psf23.98 inputs, the input can be converted to 720p23.98, 1080p23.98, 1080i59.94, or 1080p59.94. The latter two would use the 3:2 DIP switch to add 3:2 pulldown.

The compliance label, found on the back of the UDC, lists the DIP switch settings. The functions of the DIP switches and what they control are also described on the following pages.

Switch 1 (CONTROL)

This switch determines whether the UDC is configured via DIP switch or Mini-Config software.

LOCAL (LEFT)	REMOTE (RIGHT)
When in "Local" mode, the remaining DIP switches will support a subset of the user controls (default).	When in the "Remote" mode, the normal Mini-Config non-volatile registers (as last set), control the unit.

Switch 2 (HD SD)

Selects between HD and SD output.

HD (LEFT)	SD (RIGHT)
HD Output is selected (default).	SD Output is selected .

Switch 3 (1080 720)

Selects between 1080 and 720 line HD output (must be in HD mode).

1080 (LEFT)	720 (RIGHT)
1080 output is selected (default).	720 output is selected.

Switches 4 and 5 (FMT0 and FMT1)

DIP switches 4 and 5 together select alternate HD formats (FMT) as detailed in the table below (default is 1080i). A zero (0) equals left position, a one (1) equals right position, and an X equals "Don't Care."

0 (LEFT)	1 (RIGHT)
0 = Left (default)	1 = Right

Function of Output Format DIP Switches 2-5

HD/SD	1080/720	FMT0	FMT1	Output
0	0	0	0	1080i 25/29.97/30
0	0	0	1	1080pSF 23.98/2425/29.97/30
0	0	1	0	1080p 50/59.94/60
0	0	1	1	1080p 23.98/24/25/29.97/30
0	1	X	0	720p 50/59.94/60
0	1	X	1	720p 23.98/24/25/29.97/30** **Not supported in version 1
1	X	X	X	525i/625i

Switch 6 (3:2)

Controls 3:2 conversion as indicated in the following tables (applies to 23.98/24 inputs only). A zero (0) equals left position, a one (1) equals right position.

OFF (LEFT) = 0	ON (RIGHT) = 1
3:2 conversion is off (default)	3:2 conversion is on

Function of 3:2 DIP Switch 6

Input Frame Rate	3:2	Output Frame Rate
23.98/24 fps	0	23.98/24 fps
23.98/24 fps	1	29.97/30 or 59.94/60 fps

Switch 7 (UP)

Selects Up conversion modes: Sidebar or Full.

SIDEB (LEFT)	FULL (RIGHT)
Sets upconversion to "Sidebar" (default).	Sets upconversion to "Full" screen.

Switch 8 (DN)

Selects Down conversion mode: Letterbox or Full.

LTRB (LEFT)	FULL (RIGHT)
Sets downconversion to "Letterbox" (default).	Sets downconversion to "Full" screen.

Conversion Mode Discussion and Examples

Upconvert Mode


The UDC allows you to select the type of Upconversion performed on an SD source input. This mode is in effect only when the input is SD (525i or 625i) and the selected output format is HD (720p, 1080i, or 1080p).

Upconvert Mode	Selection Descriptions
	<p>Full Screen – 4x3 image is stretched horizontally to fill a 16x9 frame.</p> <p>4x3 Pillar – 4x3 image at center screen with black sidebars.</p> <p>LB to Full – 4x3 letterboxed image is scaled to fit horizontally in a 16x9 frame. Black bars top and bottom are cropped off.</p> <p>14x9 Pillar (default) – 4x3 image is scaled to create a 14x9 image with black sidebars and slightly cropping top and bottom of original image.</p> <p>Wide Zoom – A combination of scaling and stretching is used to fit to a 16x9 frame. Slight cropping of top and bottom and a small aspect ratio change</p>

Upconvert Illustrations

4:3 Upconverts To

These displays on 16:9

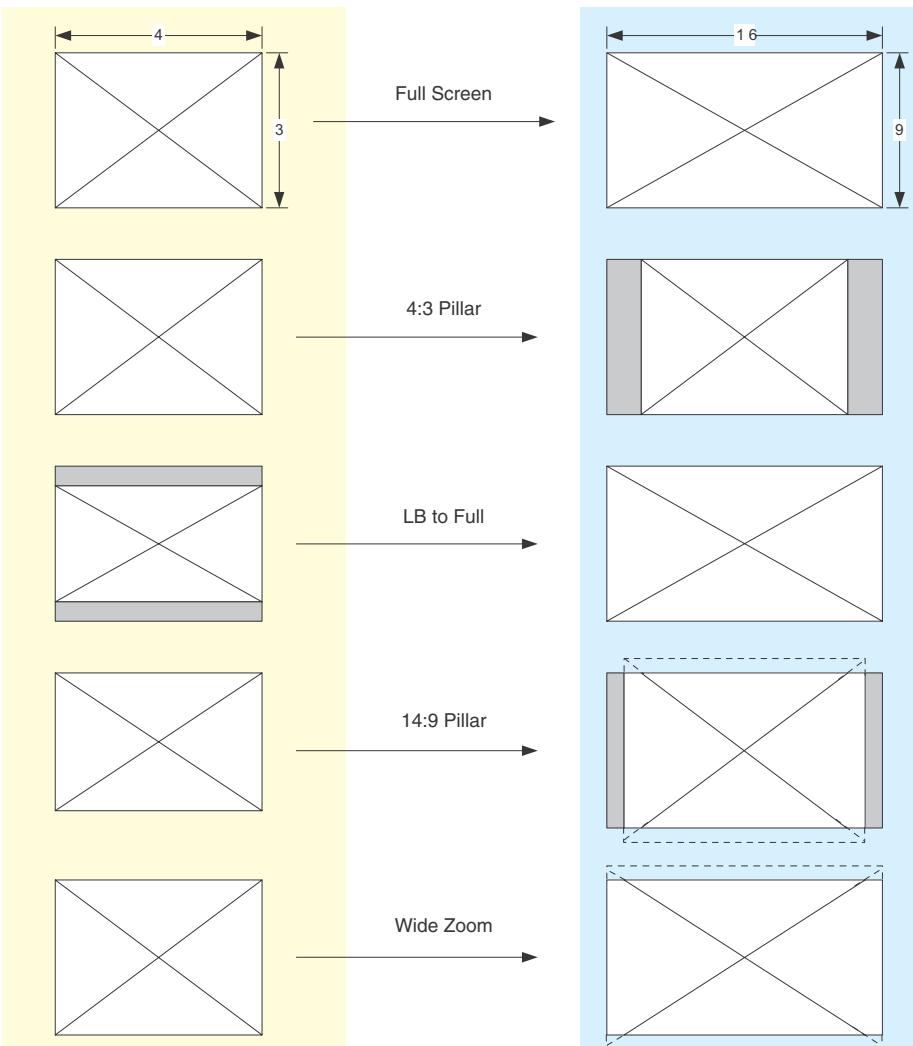

Downconvert Mode

This mode determines the type of Downconversion performed on the selected HD source input. See the following Downconvert Illustrations for Downconversion examples. This mode is in effect only when the input is HD (720p, 1080i, or 1080p) and the selected output format is SD (525i or 625i).

Downconvert Mode	Selection Descriptions
	<p>Letterbox – Image is reduced with black top and bottom added to image area, with the aspect ratio preserved.</p> <p>Crop (default) – Image is cropped to fit new screen size.</p> <p>Anamorphic – HD image is converted to full-screen SD with a 16x9 aspect ratio (anamorphic).</p> <p>14:9 – Image is reduced slightly with aspect ratio preserved. Black is added top and bottom, and the left and right sides are cropped.</p> <p>Auto AFD – Automatically selects the best Downconvert mode based on the input video's Active Format Description (AFD) code.</p>


Note: Active Format Description (AFD) codes are carried in the vertical ancillary (VANC) portion of HD SDI video signals, specified in SMPTE 2016 as follows: "AFD information is intended to guide DTV receivers and/or intermediate professional video equipment regarding the display of video of one aspect ratio on a display of another aspect ratio."

In the UDC Downconverter, the AFD code on the video input can be used to guide the Downconverter in choosing which mode to use to best display the important content of the 16:9 HD input video on the 4:3 SD output. For example, if the input AFD code is 10 (Full Frame), it means that the input video has important picture information throughout the full 16:9 frame, so the Downconverter should use Letterbox mode to be sure none of the content is cropped off. An AFD code of 9 (Pillarbox) says that the input video only has content within the center 4:3 area of the picture (usually because it originally came from an Upconverted SD signal) so the Downconverter Crop mode would be the best choice. There are 16 possible HD AFD codes, of which 8 are in common use. The UDC does not process or use SD AFD codes.

Downconvert Illustrations

16:9 Downconverts To

► These displays on 4:3

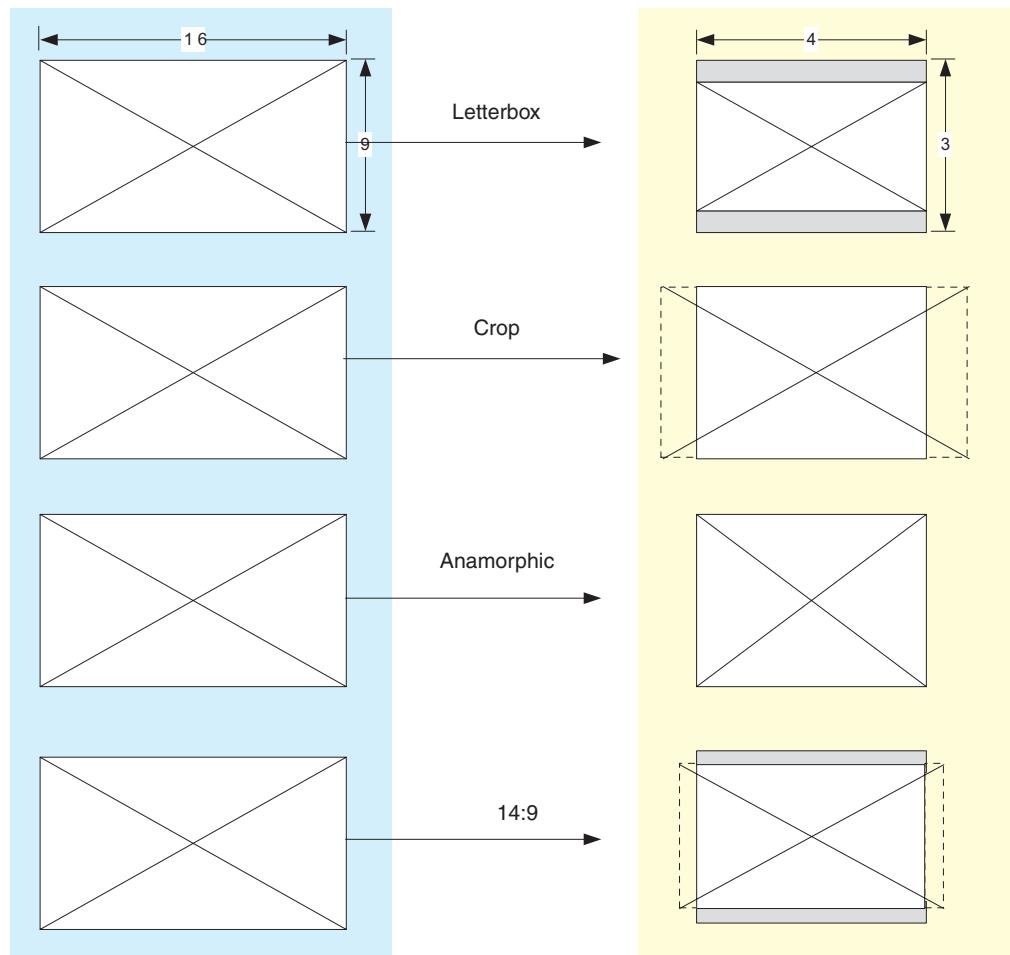


SD Aspect Ratio Convert

This mode selects the type of SD-to-SD Aspect Ratio Conversion (ARC) performed on an incoming selected SD source. This mode is in effect only when the input and output are both SD (525i or 625i). (In Europe 16:9 anamorphic video is also known as "wide screen" video.)

SD Aspect Ratio Convert	Selection Descriptions
Off —Turns aspect ratio conversion Off.	
Letterbox —Converts 16:9 Anamorphic video to Letterbox video.	
H Crop —Converts 16:9 Anamorphic video to 4:3 Standard video (crops left and right edges of video).	
Pillarbox —Converts 4:3 Standard video to 16:9 Anamorphic video.	
V Crop —Converts Letterbox video to 16:9 Anamorphic video.	
14:9 —Converts 16:9 Anamorphic video to 14:9 Cropped video.	

SD Aspect Ratio Conversion Illustrations

4:3 Converts To → These displays on 4:3

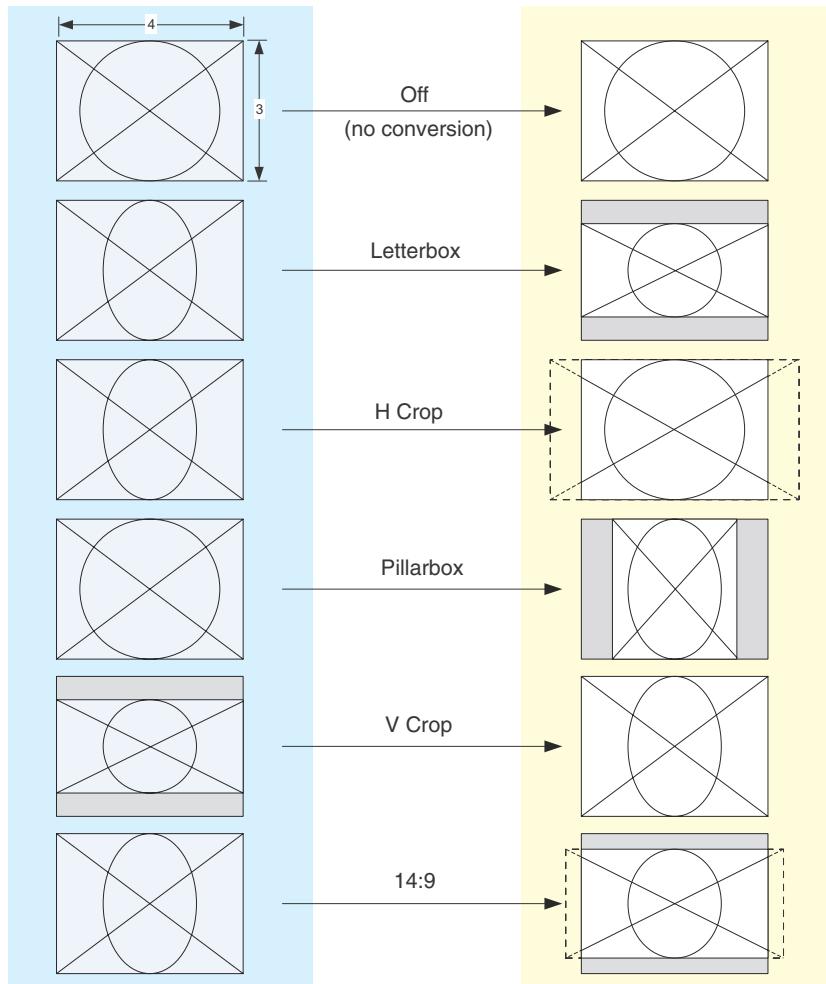

Specifications

Item	Specification
SDI I/O	SD/HD-SDI (auto-selected), SMPTE-292/296/424, 1x BNC SMPTE-292/296/424, 1x BNC525i, 625i Formats: 525i59.94, 625i50 1080i 50/59.94 720p 23.98/24/25/29.97/30/50/59.94/60 1080p 23.98/24/25/29.97/30/59.94/60 1080psf 23.98/24/25/29.97/30
Reference Input	Color Black Tri-Level sync
HDMI Output	10-bit HDMI v1.4a Formats: 525i29.97, 625i50 1080i 50/59.94/60 720p 23.98/24/25/29.97/30/50/59.94/60 1080p 23.98/24/25/29.97/30/59.94/60 Note: HDMI monitors may not properly support all frame rates or "pSF" formats.
Audio I/O	16-channel embedded SDI audio input 16-channel embedded SDI audio output 8-channel HDMI audio output 2 RCA-style analog outputs at -10dBV (nominal)
HDCP	The UDC does not encode the HDMI output with HDCP encryption. By definition, HD-SDI inputs to the UDC are unencrypted. The HDMI specification requires HDMI monitors to support unencrypted inputs.
User Controls	USB port used with supplied cable and MiniConfig software application to configure device via PC/Mac.
Size	5.8" x 3.1" x 1 (147mm x 79mm x 25mm)
Power	+5 to +20 VDC regulated, 6 watts Requires Power Supply (AJA power supply model DWP or DWP-U recommended)

Appendix A: Safety & Compliance

Federal Communications Commission (FCC) Compliance Notices

Class A Interference Statement

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15, Subpart B of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a commercial installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Canadian ICES Statement

Canadian Department of Communications Radio Interference Regulations

This digital apparatus does not exceed the Class A limits for radio-noise emissions from a digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications. This Class A digital apparatus complies with Canadian ICES-003.

Règlement sur le brouillage radioélectrique du ministère des Communications

Cet appareil numérique respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada. Cet appareil numérique de la Classe A est conforme à la norme NMB-003 du Canada.

European Union and European Free Trade Association (EFTA) Regulatory Compliance

This equipment may be operated in the countries that comprise the member countries of the European Union and the European Free Trade Association. These countries, listed in the following paragraph, are referred to as The European Community throughout this document:

AUSTRIA, BELGIUM, BULGARIA, CYPRUS, CZECH REPUBLIC, DENMARK, ESTONIA, FINLAND, FRANCE, GERMANY, GREECE, HUNGARY, IRELAND, ITALY, LATVIA, LITHUANIA, LUXEMBOURG, MALTA, NETHERLANDS, POLAND, PORTUGAL, ROMANIA, SLOVAKIA, SLOVENIA, SPAIN, SWEDEN, UNITED KINGDOM, ICELAND, LIECHENSTEIN, NORWAY, SWITZERLAND

Declaration of Conformity

Marking by this symbol indicates compliance with the Essential Requirements of the EMC Directive of the European Union 2004/108/EC.



This equipment meets the following conformance standards:

Safety:

CB- IEC 60065:2001 + A1:2005

NRTL - UL 60065:2003 R11.06, CSA C22.2 NO. 60065:2003 + A1:06

GS - EN 60065:2002 + A1

Additional licenses issued for specific countries available on request.

Emissions:

EN 55103-1: 1996

EN61000-3-2:2006, EN61000-3-3:1995 +A1:2001 +A2:2005

Immunity:

EN 55103-2: 1996

EN61000-4-2:1995 + A1:1999 + A2:2001, EN61000-4-3:2006, EN61000-4-4:2004,

EN 61000-4-5: 2005, EN 61000-4-6:2007, EN61000-4-11:2004

The product is also licensed for additional country specific standards as required for the International Marketplace.

Warning!



This is a Class A product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take appropriate measures.

Achtung! Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

Attention! Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

Korea KCC Compliance Statement

1) Class A ITE

A급 기기 (업무용 방송통신기기)	이 기기는 업무용(A 급)으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이 점을 주의하시기 바라며, 가정외의 지역에서 사용하는 것을 목적으로 합니다.
-----------------------	-------------------------------------------------------------------------------------------

1) Class A device

Class A (Broadcasting and Communication Equipment for Business Use)	Please note that this equipment has obtained EMC registration for business use (Class A), and it is intended to use in other than home area.
------------------------------------------------------------------------------	----------------------------------------------------------------------------------------------------------------------------------------------

Taiwan Compliance Statement

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

This is a Class A product based on the standard of the Bureau of Standards, Metrology and Inspection (BSMI) CNS 13438, Class A.

Japanese Compliance Statement

1. Class A ITE

この装置は、クラスA 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。V C C I -A

This is a Class A product based on the standard of the VCCI Council (VCCI V-3/2008.04). If this equipment is used in a domestic environment, radio interference may occur, in which case, the user may be required to take corrective actions.

Translated caution statements, warning conventions and warning messages

The following caution statements, warning conventions, and warning messages apply to this product and manual.



Warning Symbol



Caution Symbol

Before operating your unit, please read the instructions in this document

Warning!



Read and follow all warning notices and instructions marked on the product or included in the documentation.

Avertissement ! Lisez et conformez-vous à tous les avis et instructions d'avertissement indiqués sur le produit ou dans la documentation.

Warnung! Lesen und befolgen Sie die Warnhinweise und Anweisungen, die auf dem Produkt angebracht oder in der Dokumentation enthalten sind.

¡Advertencia! Lea y siga todas las instrucciones y advertencias marcadas en el producto o incluidas en la documentación.

Aviso! Leia e siga todos os avisos e instruções assinalados no produto ou incluídos na documentação.

Avviso! Leggere e seguire tutti gli avvisi e le istruzioni presenti sul prodotto o inclusi nella documentazione.

Warning!



Do not use this device near water and clean only with a dry cloth.

Avertissement! N'utilisez pas cet appareil près de l'eau et nettoyez-le seulement avec un tissu sec..

Warnung! Das Gerät nicht in der Nähe von Wasser verwenden und nur mit einem trockenen Tuch säubern.

¡Advertencia! No utilice este dispositivo cerca del agua y límpielo solamente con un paño seco.

Aviso! Não utilize este dispositivo perto da água e limpe-o somente com um pano seco.

Avviso! Non utilizzare questo dispositivo vicino all'acqua e pulirlo soltanto con un panno asciutto.

Warning!

Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Avertissement ! Ne bloquez aucune ouverture de ventilation. Suivez les instructions du fabricant lors de l'installation.

Warnung! Die Lüftungsöffnungen dürfen nicht blockiert werden. Nur gemäß den Anweisungen des Herstellers installieren.

¡Advertencia! No bloquee ninguna de las aberturas de la ventilación. Instale de acuerdo con las instrucciones del fabricante.

Aviso! Não obstrua nenhuma das aberturas de ventilação. Instale de acordo com as instruções do fabricante.

Avviso! Non ostruire le aperture di ventilazione. Installare in conformità con le istruzioni del fornitore.

Warning!

Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

Avertissement ! N'installez pas l'appareil près d'une source de chaleur telle que des radiateurs, des bouches d'air de chauffage, des fourneaux ou d'autres appareils (amplificateurs compris) qui produisent de la chaleur.

Warnung! Nicht in der Nähe von Wärmequellen wie Heizkörpern, Heizregistern, Öfen oder anderen Wärme erzeugenden Geräten (einschließlich Verstärkern) aufstellen.

¡Advertencia! No instale cerca de fuentes de calor tales como radiadores, registros de calor, estufas u otros aparatos (incluidos amplificadores) que generan calor.

Aviso! Não instale perto de nenhuma fonte de calor tal como radiadores, saídas de calor, fogões ou outros aparelhos (incluindo amplificadores) que produzem calor.

Avviso! Non installare vicino a fonti di calore come termosifoni, diffusori di aria calda, stufe o altri apparecchi (amplificatori compresi) che emettono calore.

Warning!



Refer all servicing to qualified service personnel. Servicing is required when the device has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the device, the device has been exposed to rain or moisture, does not operate normally, or has been dropped.

Avertissement ! Référez-vous au personnel de service qualifié pour tout entretien. L'entretien est exigé quand l'appareil a été endommagé de quelque manière que ce soit, par exemple lorsque le cordon d'alimentation ou la prise sont endommagés, que du liquide a été versé ou des objets sont tombés dans l'appareil, que l'appareil a été exposé à la pluie ou à l'humidité, ne fonctionne pas normalement ou est tombé.

Warnung! Das Gerät sollte nur von qualifizierten Fachkräften gewartet werden. Eine Wartung ist fällig, wenn das Gerät in irgendeiner Weise beschädigt wurde, wie bei beschädigtem Netzkabel oder Netzstecker, falls Flüssigkeiten oder Objekte in das Gerät gelangen, das Gerät Regen oder Feuchtigkeit ausgesetzt wurde, nicht ordnungsgemäß funktioniert oder fallen gelassen wurde.

¡Advertencia! Consulte al personal calificado por cuestiones de reparación. El servicio de reparación se requiere cuando el dispositivo ha recibido cualquier tipo de daño, por ejemplo cable o espigas dañadas, se ha derramado líquido o se han caído objetos dentro del dispositivo, el dispositivo ha sido expuesto a la lluvia o humedad, o no funciona de modo normal, o se ha caído.

Aviso! Remeta todos os serviços de manutenção para o pessoal de assistência qualificado. A prestação de serviços de manutenção é exigida quando o dispositivo foi danificado mediante qualquer forma, como um cabo de alimentação ou ficha que se encontra danificado/a, quando foi derramado líquido ou caíram objectos sobre o dispositivo, quando o dispositivo foi exposto à chuva ou à humidade, quando não funciona normalmente ou quando foi deixado cair.

Avviso! Fare riferimento al personale qualificato per tutti gli interventi di assistenza. L'assistenza è necessaria quando il dispositivo è stato danneggiato in qualche modo, ad esempio se il cavo di alimentazione o la spina sono danneggiati, è stato rovesciato del liquido è stato rovesciato o qualche oggetto è caduto nel dispositivo, il dispositivo è stato esposto a pioggia o umidità, non funziona correttamente o è caduto.

Caution!



This device is a Class A product. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to take whatever measures may be necessary to correct the interference at their own expense.

Attention! Le périphérique est un produit de Classe A. Le fonctionnement de cet équipement dans une zone résidentielle risque de causer des interférences nuisibles, auquel cas l'utilisateur devra y remédier à ses propres frais.

Achtung! Dies ist ein Gerät der Klasse A. Bei Einsatz des Geräts in Wohngebieten kann es Störungen des Radio- und Fernsehempfangs verursachen. In diesem Fall muss der Benutzer alle notwendigen Maßnahmen ergreifen, die möglicherweise nötig sind, um die Störungen auf eigene Rechnung zu beheben.

¡Precaución! Este es un producto clase A. El uso de este equipo en áreas residenciales puede causar interferencias nocivas, en cuyo caso, se requerirá que los usuarios tomen cualquier medida necesaria para corregir la interferencia por cuenta propia.

Cuidado! Este dispositivo é um produto Classe A. Operar este equipamento em uma área residencial provavelmente causará interferência prejudicial; neste caso, espera-se que os usuários tomem as medidas necessárias para corrigir a interferência por sua própria conta.

Attenzione! Questo dispositivo è un prodotto di Classe A. Il funzionamento di questo apparecchio in aree residenziali potrebbe causare interferenze dannose, nel cui caso agli utenti verrà richiesto di adottare tutte le misure necessarie per porre rimedio alle interferenze a proprie spese.